

Showerhead Installation Instructions

TOOLS NEEDED: Pliers and crescent wrench, stiff bristle nylon brush, cloth or masking tape, plumber's tape/Teflon tape, new showerhead and bath mat.


BEFORE YOU START: Turn shower faucet off. Place a bath mat in tub to protect finish. Wrap wrench and plier jaws with tape to protect finish.



1 Remove old showerhead from shower arm. If it is too tight to remove without tools, use a wrench to hold the shower arm while you loosen the showerhead with pliers.



3 Install the new showerhead. Apply plumber's tape to shower arm threads (clockwise). Screw on the new showerhead and hand tighten (clockwise).

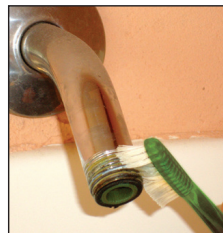

2 Clean pipe threads well. Remove old plumber's tape and dirt and rust particles to ensure a good seal. Use a stiff bristle nylon brush to clean threads if needed.



4 Test the showerhead by turning the shower on. If the showerhead leaks, tighten gently using a wrench to hold the shower arm and pliers on the showerhead. Tighten until snug. Do not over-tighten.

Questions? Call 1-888-553-SIMPLE or visit www.SimpleStepsNW.com

